



- Absolute, Gauge and Sealed Gauge
- -1 to 1000 bar
- Stainless steel construction
- 4-20mA or voltage

Contents

1 Introduction 1
 2 Scope of Supply 1
 3 Unpacking 1
 4 Storage 1
 5 Outline Dimensions and Installation 2
 6 Electrical & Intrinsically Safe Connections 2
 7 Operation 6
 8 Maintenance 6
 9 Warranty 6
 10 Appendix 6

1. Introduction

At the heart of the MPM489 pressure transmitter is a precision, silicon, Piezoresistive sensing element, enclosed in a 316L stainless steel housing.

Please read this manual carefully to ensure correct & reliable operation.

2. Scope of Supply

The transmitter is supplied with the following items as standard:

MPM489 Pressure Transmitter	1
Mating Connector	1 (DIN connector only)
Operation Manual	1
Calibration sheet	1

3. Unpacking

a) Carefully unpack the transmitter, taking care not to damage the transmitter or accessories.

4. Storage

The transmitter should be stored in a dry, well-ventilated room with an ambient temperature of -40°C to 120°C/-20°C to 85°C (depending on the cable type) and a relative humidity of ≤85%. The room should not contain any corrosive substances.

5. Outline Dimensions and Installation

5.1 Dimensions (mm)

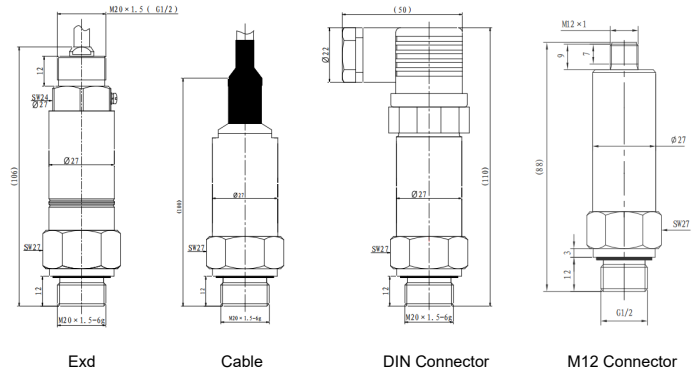


Fig. 1 (Same length for process connection G1/4, G1/2, M20)

5.2 Installation

5.2.1 Check before Installation:

- The measuring pressure is within the transmitter's pressure range.
- The pressure media is compatible with the sensor's construction material.
- The pressure media is unlikely to obstruct the pressure port opening.

5.3 Installation method

Generally, the transmitter should be mounted vertically, perpendicular to the ground, with the pressure port downwards. If this is not possible, the maximum slope angle between the transmitter and the ground should not exceed 30 degrees. It is **NOT** recommended to mount the transmitter upside down. As an example, the MPM489 pressure transmitter with a suitable male pressure port can be directly installed on a measuring pipe joint. To facilitate installation and maintenance, a shut-off valve should be installed between the connector and the pipeline (See Figure 2). The recommended torque is between 20Nm and 35Nm.

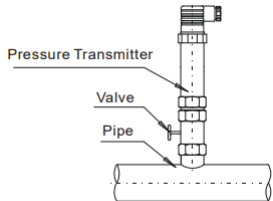


Fig. 2

6. Electrical Connection

6.1 Pin definition

The transmitter either comes with cable or connectors (DIN/M12) for connecting to a measurement system. Please refer to Figure 3 and Figure 4 for the pin arrangement of DIN and M12 connectors

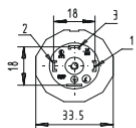


Fig. 3

Pin	2-wire	3-wire
1	+V	+V
2	OV/+OUT	GND
3	Null	+OUT




Fig. 4

Pin	2-wire	3-wire
1	+V	+V
2	Null	GND
3	OV/+OUT	+OUT

The pin definitions of cable output are as follows:

Cable	2-wire	3-wire
Red	+V	+V
Black	OV/+OUT	GND
White	Null	+OUT

6.2 DIN Connector Fitting

- If the DIN connector is already connected to the transmitter, loosen the central screw on the top of the connector using a small screwdriver and pull the socket away from the transmitter. (**Caution: Do not remove the plug from the transmitter to protect it.**)
- To disconnect the wiring block, remove the central screw on the top of the socket. Then, turn the socket over and insert a small flat-head screwdriver into a corner marked "Lift" or an arrow and apply force. The socket wiring block can then be disconnected from the housing.
- To connect the cable, pass the cable through the cable jack and connect the wires to the terminals on the plug core correctly. (The connection terminals are marked with clear numbers.) Please use Ø4.5mm-Ø7mm shielded cable and connect the cable cores securely to prevent short circuits.
- Gently pull the cable and push the socket wiring block into the housing, then tighten the cable-fixing nut.
- Securely attach the mating socket to the transmitter.
 Caution: Ensure that the rectangular sealing ring is installed / seated correctly to maintain the protection class when connecting the plug and socket.
- To remove the cable, loosen the cable-fixing nut to release the cable. Then, perform the same steps as in steps a) to disconnect the socket & step b) to access the wiring block. Remove the cable from the terminals using a small screwdriver and pull the cable out of the cable-fixing nut. Then, reassemble the socket assembly.

6.3 Intrinsically Safe Ex Transmitter Electrical Connection

a) Connection of Intrinsically Safe Transmitter and Safe Barrier

When using an Intrinsically Safe version of the transmitter in an explosive gas environment, connect the transmitter with an appropriate Zener barrier to establish an intrinsically safe system.

b) Zener Barrier Requirements

The barrier should comply with the intrinsically safe parameters and have a Qualified Certificate. The safe barrier and the power supply should be located in the safe area, and the intrinsically safe version transmitter should be located in the hazardous area. Please refer to Figures 5 and 6 for current and voltage output.

Transmitter Intrinsically Safe parameters:
ExiallCT4Ga
Ui= 28VDC li=115mADC
Li=0mH Ci=0.055uF
Pi=0.66W

Safe barrier parameters:
Ui= 28VDC li=115mADC
Pi=0.66W

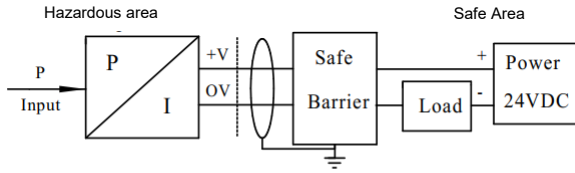


Fig. 5

Transmitter Intrinsically safe parameters:
Ui= 26VDC li=140mADC
Li=0mH Ci=0.055uF
Pi=0.66W

Safe barrier parameters:
Ui= 26VDC li=140mADC
Pi=0.66W

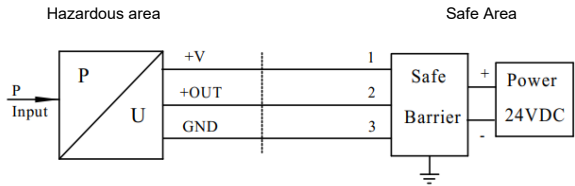


Fig. 6

Please note that the maximum allowable distributed capacitance for the cable connecting the transmitter to the safe barrier is $C_p = C_o - C_i$, and the maximum allowable distributed inductance is $L_p = L_o - L_i$. Users may purchase any safe barriers. As long as the safe barrier meets the above requirements and has a Qualified Certificate, it can be used with the transmitter. Please install and operate the safe barrier according to the instructions in the operating manual.

7. Operation

Ensure that the installation and electrical connections are correct. The transmitter will begin to respond immediately after the power is applied.

Note : The output signal may take up to 30 minutes to become stable (warm-up).

8. Maintenance

The MPM489 pressure transmitter is a precision measuring device. Please pay attention to the following items during operation:

- If the pressure port is blocked or the diaphragm is dirty, please clean them with a solvent that is compatible with the transmitter's construction material. Do not insert any hard object / cleaning tools into the pressure port. For a flush diaphragm version, gently brush the diaphragm to remove any contamination. Any damage to the exposed diaphragm will cause transmitter performance issues.
- Any other cable cores / connector terminals *not* mentioned on page 3 should *not* be connected to protect the transmitter (additional cores/connections are for internal factory use only).
- Note: For Gauge sensors, any vent hole / vent tube in the centre of the cable must not be blocked or become contaminated with water, and must be allowed to vent to the atmosphere at all times. This is to protect the product and ensure the accuracy of the output measurement.

9. Warranty

Within one year from the delivery date, we will repair or replace the instrument free of charge for any quality defect caused by material defects or our manufacturing process. However, for any non-quality malfunction that occurs during the user's operation, we will repair it but the user will be responsible for all material costs and shuttle transportation fees.

10. Appendix

Description of Calibration Sheet

